




1. Arming the Alarm:

Turn the ignition key and go out the car. Press the  icon on the remote. The alarm will beep, hazard lights will flash once, car will close. The alarm is arming for 15 seconds. After this period the indicator (LED) will flash slowly, indicating the full arming of the alarm.


2. Disarming the Alarm:

Press  icon on the remote. The door will open. The alarm will beep, hazard lights will flash twice, car will open. The indicator (LED) will stop flashing.


3. Silent Arming:

Press  icon on the remote. The hazard lights will flash once, car will close. The alarm is arming for 15 seconds. After this period the indicator (LED) will flash slowly, indicating the full arming of the alarm.

4. Remote Trnk Release:

Press and hold  icon on the remote for 2 seconds while the alarm is disarmed. The trunk opens automatically.

5. Auto Rearming (optional):

If after disarming the alarm for 15 seconds none of the door is opened, the alarm will beep and LED will flash. After another 15 seconds the alarm will arm. If you want to turn on/ turn off this function turn the ignition key, hold the  icon and wait for the alarm beeping and LED flashing.


6. Door Open Alert (optional - JUMPER):

The hazard lights warn about open door. Turning off the function is possible by removing the jumper (JUMPER).

7. Ignition Controlled Door Lock/Unlock (optional - JUMPER):

Your vehicle will have the ability to automatically lock the doors after turning on the ignition key (after 10 seconds) and automatically unlock when the ignition key is turned off. If, during the starting a car, any of the door is open, the function will not work. Turning off the function is possible by removing the jumper (JUMPER).

8. Car Locator:

In the parking lot or at night, when you cannot locate the car, press and hold  icon. The siren will sound for 4 seconds.



9. Emergency Alarm Disarming:

When the alarm is armed and you lost your remote control or the batteries are discharged, you can disarm the alarm by opening door – siren will sound, turn on the ignition key and press hidden Reset Switch.



10. "Valet" Mode:

Useful in situations when the alarm should not be active - for example, in a car wash. To enable/disable all functions of the alarm, turn on the ignition key and open the door. Next press and hold the Reset Switch for 5 seconds.



11. "Panic" Mode:

Press and hold the  icon on the remote for 5 seconds or press the  while the alarm is armed. The siren will sound and hazard lights will flash for 20 seconds.

12. Silent/ Loud Closing Mode(optional):

The alarm must be disarmed. Press and hold the  and  icons in the same time for 2 seconds. The alarm will confirm turning on/turning off the mode through visual and sound signals.

13. Shock sensor (optional):

The alarm must be armed. If you want to turn on/turn off the shock sensor, press and hold the  and  icons in the same time for 2 seconds. The alarm will confirm turning on/turning off the mode through visual and sound signals.

14. Timer Door Lock:

The function is available by JUMPER.


15. Protection:

If the alarm is armed, and door or bonnet is opened, the alarm will warning you through sound and visual effects - 3 cycles, 45seconds each. After this 3 cycles, if the door or the bonnet is not closed, the siren will turn on and the hazard lights will flash continuously until disarming the alarm.

16. Alarm status indicator (LED):

FUNCTION STATUS	LED
Arm	Regular flashing
Alarm has been violat	Fast flashing
Passive immobilizing	Slow flashing
Disarm and before enter Auto Rearming count-down	ON
Disarm + Ignition "ON"	OFF
Valet Mode	ON

17. Remember Car Alarm Remotes:

When the alarm is connected according to the diagram, open the door. Turn the key to ON position and turn back to OFF position. Leave key in ON position. The siren will sound once. Press the  icon, the LED will flash permanently. To confirm function please press any button – the siren will sound and indicator will go out. You can remember up to 6 remotes. Next turn off the indicator and leave programming mode in the same time.

18. Removing Alarm Remotes from Memory:

In programming mode press reset button once. The siren will sound and the remote will be removed.

19. Function selected via JUMPER:

JMP	FUNCTIONS SELECTABLE	Default	Active
S0	Ignition Controlled Door Lock/Unlock	-	+
S1	Door Open Alert	+	+
S2	Timer Door Lock	0,8 sec.	3,5 sec.

Central Lock Installation

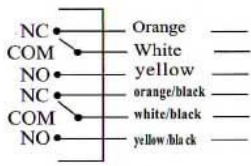


Diagram 1: Internal Principle

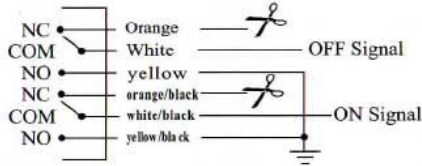


Diagram 2: Negative Trigger

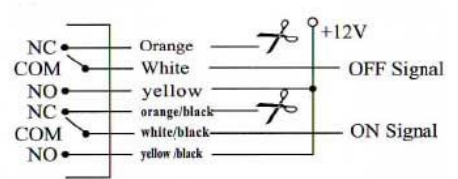


Diagram 3: Positive Trigger

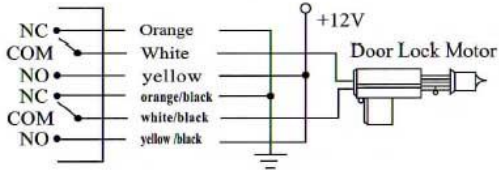


Diagram 4: Positive & Negative Trigger

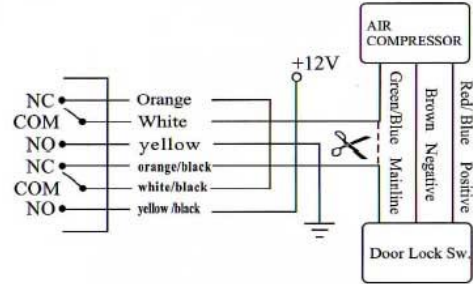


Diagram 5: For vacuum type central door lock system same sa Mercedes Benz,Audi

Installation

